




Slab Repair Couplings

Standard

- Solvent weld
- Used to connect or extend pipe work at floor level by connecting to the inside of the pipe work



Measurements (mm)

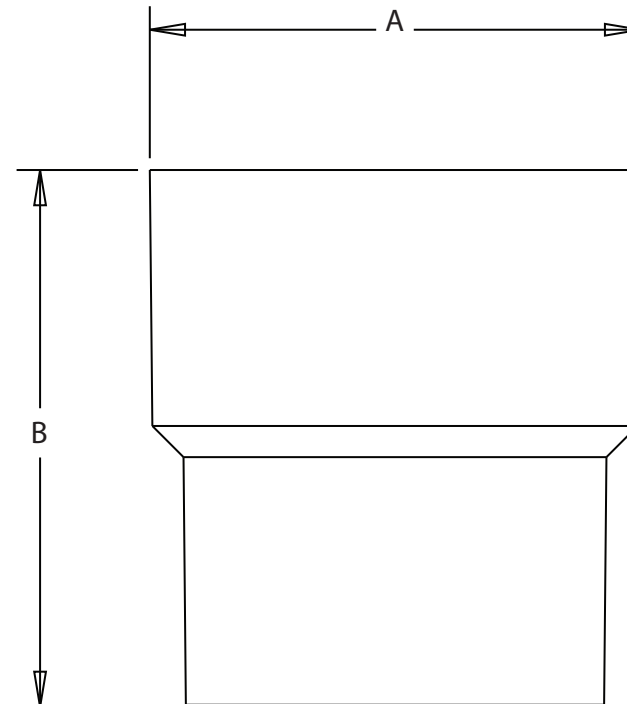

ID	INLET	OUTLET	BAG QTY	BOX QTY
12925	40 Socket	40 Spigot	15	240
12926	50 Socket	50 Spigot	10	250
15950	80 Socket	80 Spigot		90
15755	90 Socket	90 Spigot		60
15956	100 Socket	100 Spigot		75
17428	150 Socket	150 Spigot		18
15957	150 Pipe Size	150 Spigot		12
14946	100 Pipe Size	100 Earthenware Adaptor		60

ID	A	B
12925	49	61
12926	62	68
15950	88.4	96.7
15755	95.5	62
15956	116.2	108
17428	168.5	161
15957	160.3	158.5
14946	110.2	129